

# ALPHA2 GO





# ALPHA2 GO

---

## English (GB)

|                                                   |   |
|---------------------------------------------------|---|
| Installation and operating instructions . . . . . | 4 |
|---------------------------------------------------|---|

## English (GB) Installation and operating instructions

### Original installation and operating instructions

#### Table of contents

|                                           |           |                                      |                                                         |    |
|-------------------------------------------|-----------|--------------------------------------|---------------------------------------------------------|----|
| <b>1. General information</b>             | <b>4</b>  | 9.8                                  | Updating the software                                   | 27 |
| 1.1 Hazard statements                     | 4         | 9.9                                  | Resetting user settings                                 | 27 |
| 1.2 Notes                                 | 5         | 9.10                                 | Factory reset                                           | 27 |
| 1.3 Recommended safety equipment          | 5         | <b>10. Service</b>                   | <b>28</b>                                               |    |
| <b>2. Product introduction</b>            | <b>6</b>  | 10.1                                 | Dismantling the product                                 | 28 |
| 2.1 Product description                   | 6         | <b>11. Fault finding</b>             | <b>28</b>                                               |    |
| 2.2 Intended use                          | 6         | 11.1                                 | Alarm and warning code logs                             | 28 |
| 2.3 Foreseeable misuse                    | 6         | 11.2                                 | Faults indicated on the pump                            | 29 |
| 2.4 Pumped liquids                        | 6         | 11.3                                 | Resetting alarms and warnings manually with Grundfos GO | 30 |
| 2.5 Identification                        | 7         | 11.4                                 | Noise in the system                                     | 30 |
| 2.6 Approvals and markings                | 7         | 11.5                                 | Code 57 (Dry running)                                   | 30 |
| <b>3. Receiving the product</b>           | <b>8</b>  | 11.6                                 | Code 51 (Blocked pump)                                  | 30 |
| 3.1 Inspecting the product                | 8         | 11.7                                 | Code 40 (Undervoltage)                                  | 30 |
| 3.2 Scope of delivery                     | 8         | 11.8                                 | Code 4 (Overvoltage)                                    | 30 |
| <b>4. Mechanical installation</b>         | <b>8</b>  | 11.9                                 | Code 72 (Internal fault)                                | 30 |
| 4.1 Mounting the pump                     | 8         | 11.10                                | Code 76 (Internal fault)                                | 31 |
| 4.2 Changing the pump head position       | 9         | 11.11                                | Code 85 (Internal fault)                                | 31 |
| <b>5. Electrical connection</b>           | <b>11</b> | 11.12                                | Code 132 (Pump configuration corrupted or missing)      | 31 |
| 5.1 Assembling the power plug             | 11        | 11.13                                | Code 25 (Incorrect PWM configuration)                   | 31 |
| 5.2 Wiring diagram                        | 13        | 11.14                                | Code 29 (Forced pumping)                                | 31 |
| 5.3 Control box connections               | 13        | 11.15                                | Code 43 (Forced pumping)                                | 31 |
| 5.4 Accessories                           | 14        | 11.16                                | Code 35 (Air in media)                                  | 31 |
| <b>6. Starting up the product</b>         | <b>15</b> | <b>12. Technical data</b>            | <b>32</b>                                               |    |
| 6.1 Venting the product                   | 15        | <b>13. Disposing of the product</b>  | <b>33</b>                                               |    |
| 6.2 Dry-running protection                | 15        | <b>14. Document quality feedback</b> | <b>33</b>                                               |    |
| 6.3 Robust start                          | 15        |                                      |                                                         |    |
| <b>7. Control functions</b>               | <b>16</b> |                                      |                                                         |    |
| 7.1 Operating panel                       | 16        |                                      |                                                         |    |
| <b>8. Control modes</b>                   | <b>18</b> |                                      |                                                         |    |
| 8.1 Constant curve                        | 18        |                                      |                                                         |    |
| 8.2 Constant pressure                     | 18        |                                      |                                                         |    |
| 8.3 Proportional pressure                 | 18        |                                      |                                                         |    |
| 8.4 AUTOADAPT                             | 19        |                                      |                                                         |    |
| 8.5 Constant flow                         | 19        |                                      |                                                         |    |
| 8.6 PWM signal                            | 20        |                                      |                                                         |    |
| 8.7 Replacement of UPM3 or UPM4 pump      | 25        |                                      |                                                         |    |
| <b>9. Setting of the product</b>          | <b>26</b> |                                      |                                                         |    |
| 9.1 Enabling Bluetooth                    | 26        |                                      |                                                         |    |
| 9.2 Connecting the product to Grundfos GO | 26        |                                      |                                                         |    |
| 9.3 Setting of the pump in Grundfos GO    | 26        |                                      |                                                         |    |
| 9.4 Air detection and system venting      | 26        |                                      |                                                         |    |
| 9.5 Flow limitation                       | 26        |                                      |                                                         |    |
| 9.6 Night setback                         | 26        |                                      |                                                         |    |
| 9.7 Trend data                            | 27        |                                      |                                                         |    |



Read this document before you install the product. Installation and operation must comply with local regulations and accepted codes of good practice.

### 1. General information

The symbols and hazard statements below may appear in Grundfos installation and operating instructions, safety instructions and service instructions.



#### DANGER

Indicates a hazardous situation which, if not avoided, will result in death or serious personal injury.



#### WARNING

Indicates a hazardous situation which, if not avoided, could result in death or serious personal injury.



### CAUTION

Indicates a hazardous situation which, if not avoided, could result in minor or moderate personal injury.

The hazard statements are structured in the following way:



### SIGNAL WORD

#### Description of the hazard

Consequence of ignoring the warning

- Action to avoid the hazard.

## 1.2 Notes

The symbols and notes below may appear in Grundfos installation and operating instructions, safety instructions and service instructions.



Observe these instructions for explosion-proof products.



A blue or gray circle with a white graphical symbol indicates that an action must be taken.



A red or gray circle with a diagonal bar, possibly with a black graphical symbol, indicates that an action must not be taken or must be stopped.



If these instructions are not observed, it may result in malfunction or damage to the equipment.



Tips and advice that make the work easier.

## 1.3 Recommended safety equipment

We recommend the following safety equipment, when handling this product.



Wear safety shoes.



Wear protective gloves.



Wear safety glasses.

## 2. Product introduction

### 2.1 Product description

ALPHA2 GO is a high-efficiency circulator pump fitted with an electronically commutated motor and designed for circulating liquids in heating and air conditioning systems.

The Grundfos GO app offers a range of digital features that simplify the setup process for both new and replacement installations.

By using Grundfos GO, you can easily verify compatibility when replacing integrated and stand-alone circulator pumps, including replicating exact pump curves.

ALPHA2 GO is designed with intelligent controls modes:

- constant pressure
- proportional pressure
- constant flow
- constant curve.

Each mode has adjustable setpoints.

- The AUTOADAPT setting, available for constant and proportional pressure, removes the need to manually select the pump setpoint.
- The PWM input allows for precise control of the speed, better enabling complete system optimization.

The toolless installer plug results in fast and easy electrical connection.

The automatic self-venting ability and dry-running protection ensure quiet operation and reliability of the pump.

The product features robust startup which reduces the risk of blockages from dirt, magnetite and limescale build-up. In the unlikely case of a blocked pump, the motor attempts to continuously start at the highest possible torque, ensuring startup in tough conditions.

The ceramic shaft and bearings experience minimal wear, resulting in a longer lifespan and a reduced likelihood of noise in the system due to increased bearing clearance from wear.

When the system air detection and venting feature detects air in the system, the circulator pump pulsates to more effectively push air to the closest air removal device.

Grundfos GO also provides the ability to conveniently fault-find the system through the event log and historical trend data for flow, head, estimated media temperature and on-cycle durations.

### 2.2 Intended use

The pump is designed for circulating liquids in the following:

- **heat production:** boilers, heat pumps and district heating systems.

- **distribution systems:** space heating, for example, radiators, underfloor-heating systems and air-conditioning.

This pump is only for indoor use.

### Related information

#### [2.4 Pumped liquids](#)

### 2.3 Foreseeable misuse

The pump is not a safety component and cannot be used to ensure functional safety in the final appliance.

The pump is not suitable for drinking-water applications.

Do not install the pump at altitudes of 6560 ft. (2000 mtr.) or higher.

### 2.4 Pumped liquids

The product is suitable for the following liquids:


- Clean, thin, non-aggressive and non-explosive liquids, not containing solid particles or fibres.
- In heating systems, the water must meet the requirements of accepted standards on water quality in heating systems, for example the German standard VDI 2035.
- The pH must be between 8.2 and 9.5. The minimum value depends on the water hardness and must not be below 7.4 at 4 °dH (0.712 mmol/l).
- The electrical conductivity at 25 °C must be equal to or larger than 10 µS/cm.
- Mixtures of water with antifreeze media such as glycol or ethanol with a kinematic viscosity lower than 15 mm<sup>2</sup>/s (15 cSt).

### Related information

#### [2.2 Intended use](#)

## 2.5 Identification

### 2.5.1 Nameplate

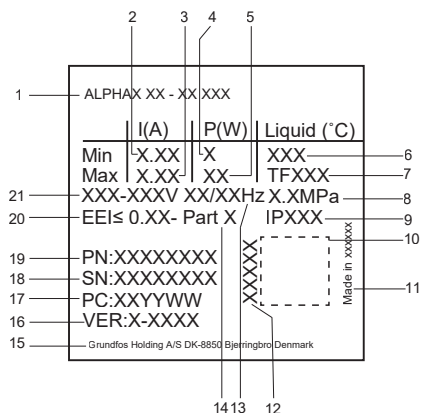

Nameplate

| Pos. | Description                                      |
|------|--------------------------------------------------|
| 1    | Product name                                     |
| 2    | Min. current consumption                         |
| 3    | Max. current consumption                         |
| 4    | Min. power consumption                           |
| 5    | Max. power consumption                           |
| 6    | Min. liquid temperature                          |
| 7    | Max. liquid temperature (TF class)               |
| 8    | Max. operating pressure                          |
| 9    | Enclosure class                                  |
| 10   | Data matrix                                      |
| 11   | Country of production                            |
| 12   | Combined legal product code                      |
| 13   | Frequency                                        |
| 14   | Part of energy efficiency standard               |
| 15   | Company address                                  |
| 16   | Version (model letter + number)                  |
| 17   | Factory code and production code (year and week) |
| 18   | Serial number                                    |
| 19   | Product number                                   |
| 20   | Energy efficiency index (EEI)                    |
| 21   | Rated voltage                                    |

### Related information

3.1 Inspecting the product

5. Electrical connection

12. Technical data

### 2.5.2 Type key

Example: ALPHA2 GO K 25-75 180

Example: ALPHA2 GO 75 PH

| Code         | Explanation                                     | Designation |
|--------------|-------------------------------------------------|-------------|
| ALPHA2<br>GO | Grundfos circulator pump                        | Pump type   |
| K            | Cold water variant                              | Variant     |
| 25           | Nominal diameter (DN) of inlet and outlet ports | Connections |
| 75           | Maximum head [dm]                               |             |
| PH           | Pump head only                                  | Variant     |
| 180          | Port-to-port length [mm]                        |             |

### 2.6 Approvals and markings



Any changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.



#### CAUTION

##### Biological hazard

Minor or moderate personal injury

- This product is not approved for drinking water applications.

### 3. Receiving the product

#### 3.1 Inspecting the product



**CAUTION**  
**Crushing of feet**

Minor or moderate personal injury

- Wear safety shoes when handling the product.



**CAUTION**  
**Sharp element**

Minor or moderate personal injury

- Wear protective gloves.

1. Make sure that the delivered product corresponds to the order.
2. Make sure that the voltage and frequency of the product match the voltage and frequency of the installation site.

#### Related information

##### [2.5.1 Nameplate](#)

#### 3.2 Scope of delivery

The box contains the following items:

- 1 pump
- 1 power plug
- 2 gaskets
- insulating shells
- 1 quick guide.

### 4. Mechanical installation

#### WARNING

##### Electric shock

Death or serious personal injury

- A damaged product must be repaired or replaced by Grundfos or a service workshop authorized by Grundfos.



#### CAUTION

##### Crushing of feet

Minor or moderate personal injury

- Wear safety shoes when handling the product.



#### CAUTION

##### Sharp element

Minor or moderate personal injury

- Wear protective gloves.



The pump must always be installed with a horizontal motor shaft within  $\pm 5^\circ$ .



The pump is a non-submersible pump.

For variants where the minimum liquid temperature is  $2^\circ\text{C}$  or  $-10^\circ\text{C}$ , operation in periodically condensing applications <sup>1)</sup> is allowed.

For variants where the minimum liquid temperature is  $-20^\circ\text{C}$ , operation in continuous condensing applications <sup>2)</sup> is allowed. Carefully install the circulator pump with the drain hole facing downward. See the section about changing the pump head position.

#### 4.1 Mounting the pump



Make sure that the pump orientation is correct.



The arrows on the pump housing indicate the flow direction through the pump.

1. Close the inlet and outlet valves.
2. Fit the two gaskets supplied with the pump when you mount the pump in the pipes.

<sup>1)</sup> For periodical condensing applications, the circulator pump must not circulate liquid at a temperature below ambient air for more than three consecutive months each year. During the rest of the year, it must operate in non-condensing mode. Prolonged condensing operation may damage the circulator pump.

<sup>2)</sup> In continuous condensing applications, any condensate formed over long periods will drain away through the provided hole.

3. Tighten the unions.
4. Make sure to use an allowed control box position.
5. Mount the power plug.
6. Mount the PWM signal plug if used.

For illustrations of the installation, see the ALPHA2 GO quick guide.



[ALPHA2 GO quick guide](#)

#### Related information

#### [4.2 Changing the pump head position](#)

## 4.2 Changing the pump head position

### CAUTION

#### Hot surface

Minor or moderate personal injury

- Position the pump so that persons cannot accidentally come into contact with hot surfaces.
- The pump housing may be hot due to the pumped liquid being scalding hot. Close the isolating valves on both sides of the pump and wait for the pump housing to cool down.



### WARNING

#### Pressurised system


Minor or moderate personal injury

- Before disassembling the pump, drain the system or close the isolating valves on both sides of the pump. The pumped liquid may be under high pressure.



To change the position of the pump head, do as follows:

1. Loosen and remove the four screws.

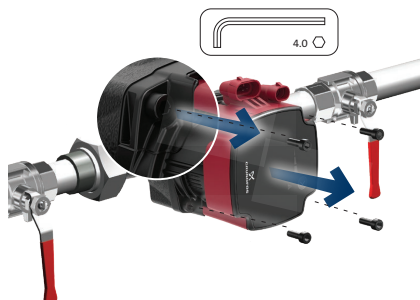


TM087974

2. Turn the pump head to the desired position.



The control box can be turned in steps of 90°.

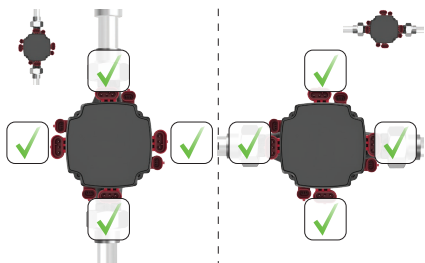


TM087975

TM087893

## ALPHA2 GO

This variant is permitted only for periodically condensing applications where the minimum liquid temperature is either 2 °C or –10 °C.

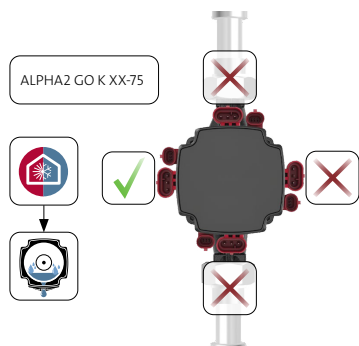


TM088798

## ALPHA2 GO K version

This variant is approved for continuous operation in condensing applications where the minimum liquid temperature may reach –20 °C. Install the circulator pump with the drain hole facing downward.

3. Insert and cross-tighten the screws (torque 5 Nm).

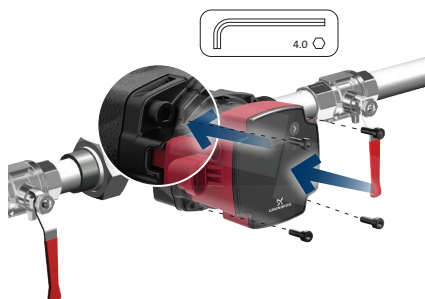

TM087976

## Related information

### 4.1 Mounting the pump

## 5. Electrical connection

### WARNING

#### Electric shock

Death or serious personal injury



- Switch off the power supply before you start any work on the product. Make sure that the power supply cannot be switched on accidentally.
- Connect the pump to earth.
- In case of an insulation fault, the fault current may be a DC or pulsating DC. Observe national legislation about requirements for and selection of Residual Current Device (RCD) when installing the product.
- All electrical connections must be carried out by a qualified electrician in accordance with local regulations.

- The pump requires no external motor protection.
- Check that the supply voltage and frequency correspond to the values stated on the nameplate.

### Related information

#### 2.5.1 Nameplate


## 5.1 Assembling the power plug

1. Unscrew the cable gland.




TM087997

2. Insert the power cable into the cable gland and cover.

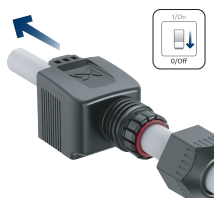


TM087996

3. Strip the wires according to the measurements below.

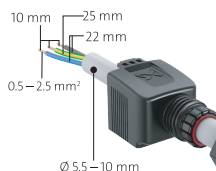


TM087995

 4. Open the wire locks.




TM087994

5. Insert the wires according to the colour code.  
Blue: neutral (N), black or brown: phase (L), yellow/green: earth.

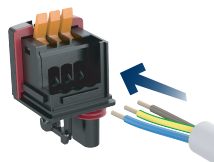

TM087993

6. Close the wire locks.

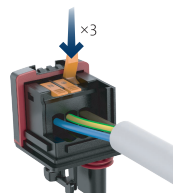


TM087992

7. Slide the cover in.



TM087991

8. Click the cover in place and tighten the cable gland.

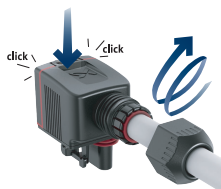

TM087990

## Related information

### 5.1.1 Rotating the power plug 90°

#### 5.1.1 Rotating the power plug 90°


Before assembling the power plug, the following preparations must be completed:

1. Remove the cover.




TM089766

2. Lift the back plate of the plug.

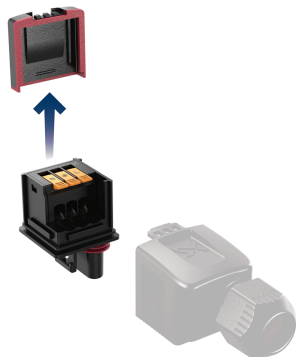


TM089767

3. Turn the plug 90° left.

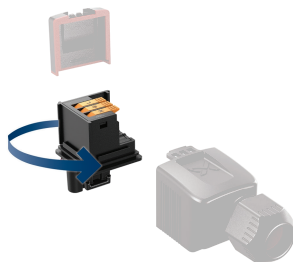


TM089768

4. Place the back plate in the 90° position.

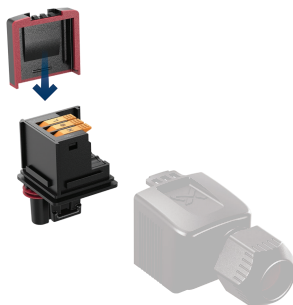

TM089769

5. Slide the cover back on.

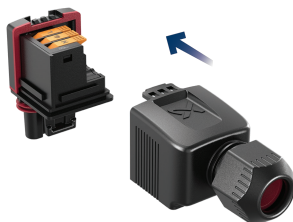


TM089770

## Related information

### 5.1 Assembling the power plug

## 5.2 Wiring diagram

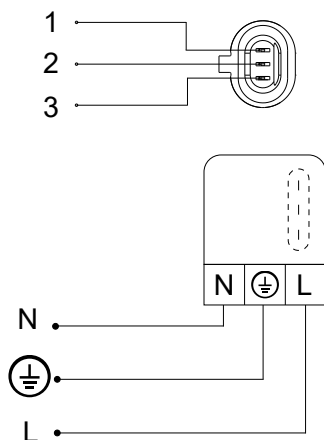

TM089307

*Power and signal plug*


| Pos.                                                                              | Description      | Wire colour    |
|-----------------------------------------------------------------------------------|------------------|----------------|
| 1                                                                                 | PWM input        | Brown          |
| 2                                                                                 | Signal reference | Blue           |
| 3                                                                                 | PWM output       | Black          |
| L                                                                                 | Phase            | Black or brown |
|  | Earth            | Yellow/green   |
| N                                                                                 | Neutral          | Blue           |

## 5.3 Control box connections

All control boxes have two electrical inlets placed on one side:

- power inlet
- signal inlet.

The signal inlet is galvanically isolated from the power supply of the circulator pump. There is therefore no risk of electrical shock if touching the signal inlet. Furthermore, the signal plug is "water tight" protecting against ingress of liquids into the control box.


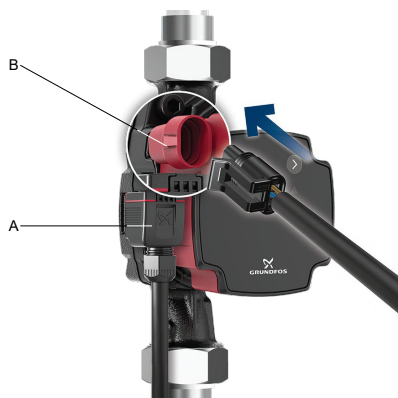


TM089771



| Pos. | Description                   |
|------|-------------------------------|
| A    | Power inlet (superseal)       |
| B    | Signal inlet (mini superseal) |

5.4 Accessories

 Power cable adapters
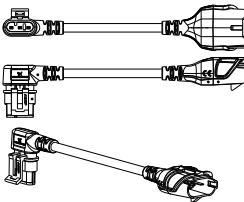
|                                                                                   | Description                                                 | Length<br>[mm] | Product<br>number |
|-----------------------------------------------------------------------------------|-------------------------------------------------------------|----------------|-------------------|
|  | Superseal Molex cable adapter, overmoulded, with rubber cap | 150            | 99165311          |
|  | Superseal Volex cable adapter, overmoulded, with rubber cap | 150            | 99165312          |
|  | Superseal to ALPHA plug                                     | 145            | 93296229          |

 Signal cable and adapter
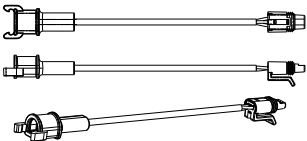
|                                                                                   | Description                                | Length<br>[mm] | Product<br>number |
|-----------------------------------------------------------------------------------|--------------------------------------------|----------------|-------------------|
|   | Mini superseal signal cable                | 2000           | 99165309          |
|  | Mini superseal to FCI signal cable adapter | 150            | 93348101          |

## 6. Starting up the product

1. Fill the system with liquid and vent it.
2. Make sure the required minimum inlet pressure is available at the pump inlet.
3. Switch on the power supply.
4. Check if the external controller sends a signal to the pump.

You can change the settings on the operating panel or via Grundfos GO. We recommend to follow the guided setup in Grundfos GO.

### Related information

[6.1 Venting the product](#)

[7.1 Operating panel](#)

[9.2 Connecting the product to Grundfos GO](#)

### 6.1 Venting the product

Small air pockets trapped inside the pump may cause noise when starting up the pump. However, because the pump is self-venting through the system, the noise ceases over a period of time. We recommend venting the pump in new installations or when the pipes have been emptied and refilled with water. You can vent the pump via Grundfos GO.

- If you follow the guided setup, you are asked if you want to vent the pump now.
- If you do not follow the guided setup, you can access the venting settings via the **Settings** menu.



The pump must not run dry.  
You cannot vent the system through the pump.

### Related information

[6. Starting up the product](#)

[7.1 Operating panel](#)

[9.2 Connecting the product to Grundfos GO](#)

### 6.2 Dry-running protection

The dry-running protection protects the pump against dry running during startup and normal operation.

#### Startup

If water has not been detected before (new pump), the pump does a detection cycle to verify that water is present. If water is not detected during the first cycle, the pump retries several times.

If water is still not detected, the pump stops, the warning and alarm symbol on the operating panel is flashing red and the error code E4 is displayed on the operating panel.

#### Normal operation

If dry running is detected during normal operation, the pump retries several times. If dry running continues, the pump stops, the warning and alarm symbol on the display is flashing red and the error code E4 is displayed on the operating panel.

The pump can be restarted by pressing the **Selection** button on the pump. The pump repeats the dry-running detection every 25 hours to verify that the pump is not running dry. Note: The pump can sustain 25 hours of dry-running operation.


### 6.3 Robust start

The non-magnetic shaft and bearings reduce the risk of blockages from dirt or magnetite, while the bearing system helps prevent limescale build-up. In the unlikely case of a blocked pump, the motor continuously attempts to start at the highest possible torque, ensuring startup in tough conditions.

## 7. Control functions

### 7.1 Operating panel

LEDs and buttons on the pump display.

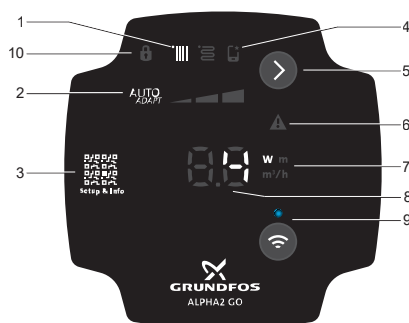

TM087129

ALPHA2 GO

| Pos. | Description                                                                                                                                       |
|------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | Control mode<br>The LED shows the operating mode of the product.                                                                                  |
| 2    | Settings for the selected control mode<br>Use the <b>Selection</b> button to toggle between I, II, III and AUTOADAPT.                             |
| 3    | QR code<br>The QR code links to information about the pump and how to set it.                                                                     |
| 4    | If lit, the pump has been set via Grundfos GO.                                                                                                    |
| 5    | Selection button<br>Use this button to select control mode and settings.                                                                          |
| 6    | Warning and alarm<br>A warning is indicated with yellow, and the pump continues operation.<br>An alarm is indicated with red, and the pump stops. |
| 7    | Unit<br>The LED shows the unit used for the number to the left. W = watt, m = metre, m³/h = cubic metre per hour.                                 |

| Pos. | Description                                                                                                                                                                                                                                                                  |
|------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8    | The LED indicates:<br><ul style="list-style-type: none"> <li>power consumption [W]</li> <li>head [m]</li> <li>flow rate [m³/h]</li> <li>error code</li> </ul>                                                                                                                |
| 9    | Connect button<br>Use this button to activate and deactivate the wireless Bluetooth connection.<br><ul style="list-style-type: none"> <li>Press the button once to activate Bluetooth.</li> <li>Press and hold the button for 15 seconds to deactivate Bluetooth.</li> </ul> |
| 10   | Lock<br>The LED indicates that the operating panel is locked and no buttons can be used. The operating panel can only be locked and unlocked via Grundfos GO.                                                                                                                |

#### Related information

- [6. Starting up the product](#)
- [6.1 Venting the product](#)
- [7.1.1 Overview of LEDs](#)
- [8. Control modes](#)
- [9. Setting of the product](#)

### 7.1.1 Overview of LEDs

The LEDs indicate the control mode, setting and operating status.

#### Factory setting

The pump is factory set to proportional pressure, AUTOADAPT.

| Active light fields                                                                | Description                                                                                                                                                                                    |
|------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|   | Advanced mode<br>The control mode is set via Grundfos GO.<br>When the pump is set via Grundfos GO, the icon is lit and the control modes and settings on the operating panel are switched off. |
|   | Proportional-pressure mode                                                                                                                                                                     |
|   | Constant-pressure mode                                                                                                                                                                         |
|    | Setting I                                                                                                                                                                                      |
|    | Setting II                                                                                                                                                                                     |
|    | Setting III                                                                                                                                                                                    |
|   | AUTOADAPT mode                                                                                                                                                                                 |
|  | The pump is set to <b>STOP</b> in Grundfos GO or by an active PWM stop signal.                                                                                                                 |

When the symbols for the constant-pressure and proportional-pressure modes are off, the pump is running in constant-curve mode.

#### Related information

##### [7.1 Operating panel](#)

### 7.1.2 Power saving

In order to lower the energy consumption and heat generation, the operating panel goes into power saving mode after 15 minutes of inactivity. The power saving mode switches off the LEDs in the middle including the dot and the units.

- To reactivate the pump from the power saving mode, press the **Selection** button.

- If a warning or an alarm is present during power saving mode, only the yellow or red LED will be lit. Press the **Selection** button to see the error code.
- If the operating panel is locked via Grundfos GO, the lock icon on the operating panel will be lit in power saving mode.
- The power saving function can be disabled via Grundfos GO.

## 8. Control modes

ALPHA2 GO can be set to the following control modes:

- constant curve
- proportional pressure
- constant pressure
- constant flow
- external control (PWM)
- replacement mode.

All control modes can be set in Grundfos GO. However, only constant curve, constant pressure and proportional pressure can be set on the operating panel.


### Related information

#### 7.1 Operating panel

### 8.1 Constant curve

In the constant-curve mode, the pump runs at a constant curve, which means that it runs at constant speed or power. The pump performance follows the selected constant curve. This control mode is especially suitable in applications where the characteristics of the heating system are steady, and the emitters require a constant flow. The selection of the constant-curve setting depends on the characteristics of the heating system and the actual required flow and heat demand.

The curve's setpoint is user defined in Grundfos GO. The speed in percentage of maximum speed can be chosen anywhere between the minimum and maximum constant curve in intervals of 1 %.

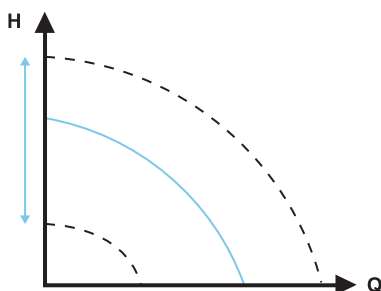

Constant curve


TM071005

### 8.2 Constant pressure

In the constant-pressure mode, the pump runs at constant pressure, which means the head (pressure difference) is kept constant, regardless of the heat demand (actual number of open zones). The pump performance follows the selected constant-pressure curve.

This control mode is especially suitable for underfloor heating and applications where the pump is used to supply a common manifold for multiple zones. The head across each zone will remain constant, independent of how many zones request heat. Thus a constant flow in each zone will be maintained, independent of other zones. The selection of the constant-pressure setting depends on the characteristics of the zones in the heating system and the actual heat demand.

The curve's setpoint is user defined in Grundfos GO. The setpoint can be chosen anywhere between the minimum and maximum constant-pressure curve in intervals of 0.1 m.

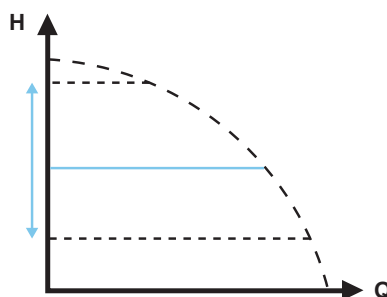

TM083818


Constant pressure

### 8.3 Proportional pressure

In the proportional-pressure mode, the pump runs at proportional pressure, which means the head (pressure) is reduced at falling heat demand and increased at rising heat demand. The pump performance follows the selected proportional-pressure curve. This control mode is especially suitable for applications where the heat emitters are equipped with a TRV (thermostatic radiator valve) which controls the flow depending on the room temperature. At increased flow, the losses in the distribution system (pipes and fittings) increase, hence the pumps increase the pressure to compensate and vice versa, hereby maintaining an almost constant differential pressure across the thermostatic radiator valve.

The proportional-pressure mode setpoint depends on the heating system's characteristics and the actual heat demand.

The curve's setpoint is user defined in Grundfos GO. The setpoint can be chosen anywhere between the minimum and maximum proportional curve in intervals of 0.1 m. The head against a closed valve is half the setpoint  $H_{\text{set}}$ , although never below 1 m.

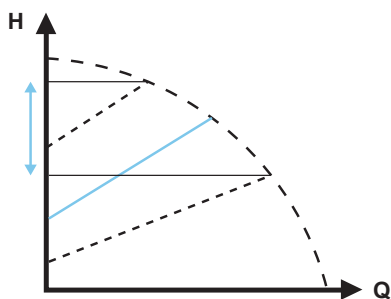


Proportional-pressure settings

## 8.4 AUTOADAPT

AUTOADAPT is an integrated function in the constant-pressure and proportional-pressure modes.

AUTOADAPT selects the best control curve under the given operating conditions. The pump performance is automatically adjusted to the actual heat demand, that is the size of the system and the changing heat demand over time, by continuously selecting either a proportional-pressure curve or constant-pressure curve within the AUTOADAPT performance range.

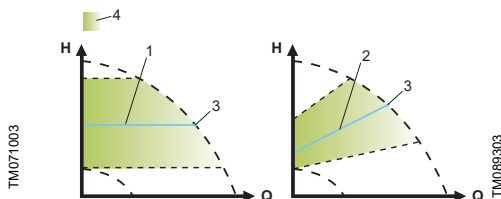

AUTOADAPT


| Pos. | Description                 |
|------|-----------------------------|
| 1    | Constant-pressure curve     |
| 2    | Proportional-pressure curve |
| 3    | Setpoint                    |
| 4    | AUTOADAPT performance range |

Do not expect an optimal pump setting from day one. If the power supply fails or is disconnected, the pump stores the AUTOADAPT setting in an internal memory and resumes the automatic adjustment when the power supply has been restored.

## 8.5 Constant flow

In this control mode, the pump maintains a constant flow in the system independently of the head.

The curve's setpoint is user defined only in Grundfos GO. The setpoint can be chosen anywhere between the minimum and maximum flow curve in intervals of 0.1 m<sup>3</sup>/h.

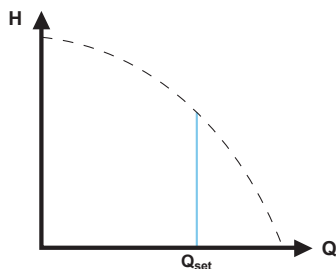

TM071240

Constant-flow curve

We recommend that you select this control mode if you know the desired flow rate to the system.

#### Overview of ALPHA2 GO flow rates:

| Pump variant    | Lower flow limit [m <sup>3</sup> /h] | Upper flow limit [m <sup>3</sup> /h] |
|-----------------|--------------------------------------|--------------------------------------|
| ALPHA2 GO XX-40 | 0.25                                 | 2.0                                  |
| ALPHA2 GO XX-60 | 0.25                                 | 2.5                                  |
| ALPHA2 GO XX-75 | 0.25                                 | 3.5                                  |
| ALPHA2 GO XX-90 | 0.25                                 | 3.8                                  |

## 8.6 PWM signal

A PWM (Pulse Width Modulation) signal is used in pumps to control their speed and flow rate efficiently. External PWM control mode can only be selected via Grundfos GO.

### 8.6.1 Installation with PWM signal

In a replacement situation where the old pump was controlled with a PWM signal, the ALPHA2 GO pump only needs to be connected to power and an external signal and configured with Grundfos GO to be ready to operate.

In a new pump setup where the external PWM signal is to be configured, you need the following information:

#### 1. PWM signal specifications:

- **Frequency:** The PWM signal frequency must match the requirements of the pump.
- **Duty cycle:** This determines the speed of the pump.
- **Voltage levels:** Ensure that the PWM signal voltage levels are matching the requirements of the pump.

#### 2. Feedback mechanism:

- **PWM feedback signal:** This signal can provide information about the pump's operating status, such as power consumption and speed.
- Feedback mechanisms in circulator pumps with PWM control are essential for monitoring and adjusting the pump's performance.
  - Operating status:**
    - The feedback signal provides real-time information about the pump's operating status. For example, it can indicate whether the pump is running, its speed and any potential issues.
  - Flow or power consumption:**
    - The feedback signal can reflect the flow or power consumption of the pump. This helps in monitoring energy usage and ensuring the pump operates efficiently.
  - Error detection:**
    - If the pump encounters an issue, such as a blocked rotor or low power voltage, the feedback signal can indicate this by changing its duty cycle. For instance, a blocked rotor will set the feedback signal to 90 %, triggering a warning.
  - System integration:**
    - The feedback signal can be used to compare the actual operating status of the pump with the desired

settings. This allows for precise control and adjustments to maintain optimal performance.

**e. Protection features:**


- In the event of signal loss or cable breakage, the feedback mechanism ensures that the pump operates in the safest possible way, depending on the system in which the pump is mounted.

These feedback mechanisms are crucial for maintaining the reliability and efficiency of circulator pumps in various applications, such as heating systems, heat pumps and solar systems.

### 8.6.2 PWM interface

The PWM interface consists of an galvanically isolated circuit connecting the external control signal to the pump. The interface translates the external signal into a signal type that the microprocessor can understand.

The galvanically isolated interface ensures that the user cannot get into contact with dangerous voltage if the signal wires are touched when the pump is connected to power.

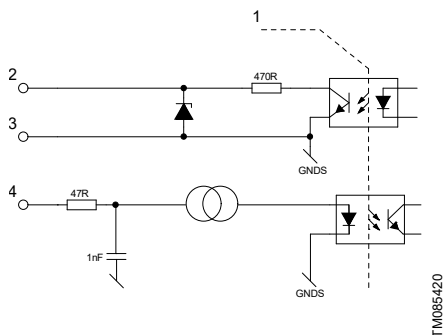

*Schematic drawing, equivalent interface*

| Pos. | Description                                               |
|------|-----------------------------------------------------------|
| 1    | Galvanic isolation                                        |
| 2    | PWM output                                                |
| 3    | Signal reference (without connection to protective earth) |
| 4    | PWM input                                                 |

### 8.6.3 Digital low-voltage PWM signal


The square-wave PWM signal is designed for a frequency range of 100 to 1500 Hz for the standard input profiles. The PWM signal is used to select the speed (speed command) and as feedback signal. The PWM frequency on the feedback signal is fixed at 75 Hz in the pump.

#### Duty cycle

$$d \% = 100 \times t/T$$

| Example                             | Rating                                                                |
|-------------------------------------|-----------------------------------------------------------------------|
| $T = 2 \text{ ms}$ (500 Hz)         | $U_{IH} = 4\text{-}24 \text{ V}$                                      |
| $t = 0.6 \text{ ms}$                | $U_{IL} \leq 1 \text{ V}$                                             |
| $d \% = 100 \times 0.6 / 2 = 30 \%$ | $4.5 \text{ mA} \leq I_H \leq 10 \text{ mA}$ (depending on $U_{IH}$ ) |

#### Example

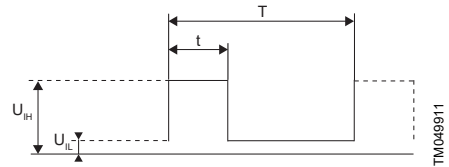


PWM signal

| Abbreviation | Description                      |
|--------------|----------------------------------|
| $t$          | Duration of the pulse signal [s] |
| $T$          | Total period of time [s]         |
| $U_{IH}$     | High-level input voltage         |
| $U_{IL}$     | Low-level input voltage          |

### 8.6.4 PWM input signal profile A (heating)

At high PWM signal duty cycles, a hysteresis prevents the pump from starting and stopping if the input signal fluctuates around the shifting point. At low PWM signal duty cycles, the pump speed is high for safety reasons. In case a cable breaks when mounted in a system, the pump starts to run at maximum speed. This is suitable for both boilers and heat pumps to ensure that the pump transfers heat even if a cable breaks.

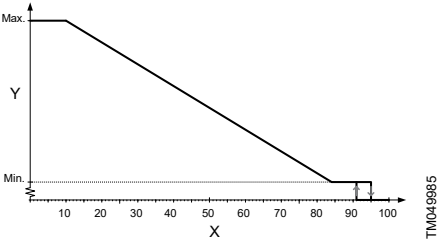


PWM input profile A (heating)

| Axis | Value            |
|------|------------------|
| X    | Input duty cycle |
| Y    | Speed            |

| PWM input duty cycle                    | Pump status                            |
|-----------------------------------------|----------------------------------------|
| PWM signal $\leq 10 \%$                 | Max. speed                             |
| $10 \% < \text{PWM signal} \leq 84 \%$  | Variable speed from min. to max. speed |
| $84 \% < \text{PWM signal} \leq 91 \%$  | Min. speed                             |
| $91 \% < \text{PWM signal} \leq 95 \%$  | Hysteresis area: on/off                |
| $95 \% < \text{PWM signal} \leq 100 \%$ | Standby mode: off                      |

### 8.6.5 PWM input signal profile C (solar)

At low PWM signal percentages (duty cycles), a hysteresis prevents the pump from starting and stopping if the input signal fluctuates around the shifting point. Without PWM signal percentages, the pump will stop for safety reasons. If a signal is missing, for example due to a cable breakage, the pump will stop to avoid overheating of the solar thermal system.

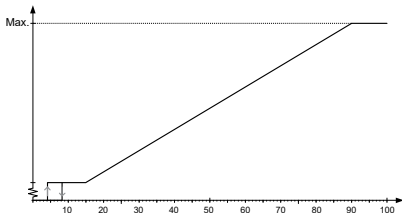

TM051575

PWM input profile C (solar)

| Axis | Value                |
|------|----------------------|
| X    | PWM input signal [%] |
| Y    | Speed                |

| PWM input signal [%] | Pump status                                  |
|----------------------|----------------------------------------------|
| $\leq 5$             | Standby mode: off                            |
| $> 5 / \leq 8$       | Hysteresis area: on/off                      |
| $> 8 / \leq 15$      | Minimum speed                                |
| $> 15 / \leq 90$     | Variable speed from minimum to maximum speed |
| $> 90 / \leq 100$    | Maximum speed                                |


### 8.6.6 PWM feedback signal

The PWM feedback signal offers the same pump information as in bus systems:

- current power consumption or flow estimation
- warning
- alarm
- operating status.

### Alarms on power consumption

Alarm output signals are available because some PWM output duty cycles are dedicated to alarm information. If a supply voltage is measured below the specified supply voltage range, the output duty cycle is set to 75 %. If the rotor is locked due to deposits in the hydraulics, the output duty cycle is set to 90 % as this alarm has a higher priority.

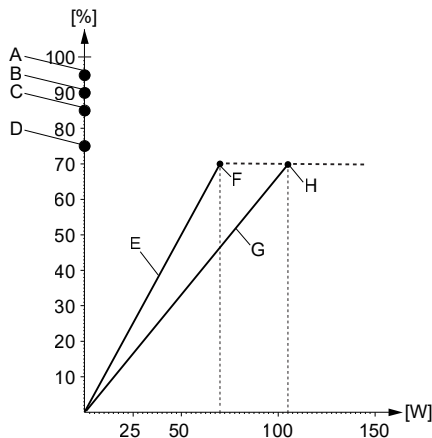

TM088572

PWM feedback signal, power consumption


| Pos.   | Description                                                               |
|--------|---------------------------------------------------------------------------|
| X-axis | Output power consumption [W]                                              |
| Y-axis | Output duty cycle in percentage [%]                                       |
| A      | Standby (stop)                                                            |
| B      | Alarm stop: fault, blocked pump                                           |
| C      | Alarm stop: electrical fault                                              |
| D      | Warning                                                                   |
| E      | Slope: 1 W / % PWM signal<br><b>Valid for ALPHA2 GO XX-40 and XX-60</b>   |
| F      | Saturation at 70 W                                                        |
| G      | Slope: 1.5 W / % PWM signal<br><b>Valid for ALPHA2 GO XX-75 and XX-90</b> |
| H      | Saturation at 105 W                                                       |

| PWM output duty cycle | Pump information                 |
|-----------------------|----------------------------------|
| 95 %                  | Standby (stop) by PWM duty cycle |
| 90 %                  | Alarm, stop, blocked error       |
| 85 %                  | Alarm, stop, electrical error    |
| 75 %                  | Warning                          |
| 0-70 %                | Operating range                  |

Output frequency: 75 Hz  $\pm$  5 %.

#### Alarms on flow estimation

Alarm output signals are available because some PWM output duty cycles are dedicated to alarm information. If a supply voltage is measured below the specified supply voltage range, the output duty cycle is set to 75 %. If the rotor is locked due to deposits in the hydraulics, the output duty cycle is set to 90 % as this alarm has a higher priority.

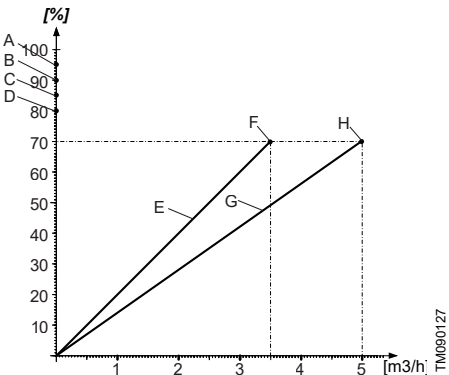

PWM feedback signal, flow estimation

| Pos.   | Description                                                                   |
|--------|-------------------------------------------------------------------------------|
| X-axis | Output power consumption [m³/h]                                               |
| Y-axis | Output duty cycle in percentage [%]                                           |
| A      | Standby (stop)                                                                |
| B      | Alarm stop: fault, blocked pump                                               |
| C      | Alarm stop: electrical fault                                                  |
| D      | Dry running                                                                   |
| E      | Slope: 0.05 m³/h / % PWM signal<br><b>Valid for ALPHA2 GO XX-40 and XX-60</b> |

| Pos. | Description                                                                   |
|------|-------------------------------------------------------------------------------|
| F    | Saturation at 3.5 m³/h                                                        |
| G    | Slope: 0.07 m³/h / % PWM signal<br><b>Valid for ALPHA2 GO XX-75 and XX-90</b> |
| H    | Saturation at 5.0 m³/h                                                        |

| PWM output duty cycle | Pump information                 |
|-----------------------|----------------------------------|
| 95 %                  | Standby (stop) by PWM duty cycle |
| 90 %                  | Alarm, stop, blocked error       |
| 85 %                  | Alarm, stop, electrical error    |
| 80 %                  | Dry running                      |
| 0-70 %                | Operating range                  |

Output frequency: 75 Hz  $\pm$  5 %.

## 8.7 Replacement of UPM3 or UPM4 pump

ALPHA2 GO can be used to replace the majority of integrated UPM3 or UPM4 circulator pumps. This means that when replacing an existing circulator pump, the new ALPHA2 GO pump replicates the performance as well as PWM configuration of the existing circulator pump. In the Grundfos GO app (via the **GO Replace** tool) or online via <https://grundfos.to/replace>, you can check the compatibility of the pump. During the replacement process, Grundfos GO guides you step-by-step through the setup of the new circulator pump to match the existing circulator pump. The replication process can be initiated directly from the GO Replace tool or through the guided setup when initially connecting the pump to Grundfos GO.

### 8.7.1 Replacing a UPM3 or UPM4 pump

To finish the configuration of a UPM3 or UPM4 pump after replacing it, follow these steps:



In order to replicate a pump controlled via a PWM signal, the ALPHA2 GO pump also requires input from the same PWM signal. Mini superseal to FCI signal cable adapter can be found in the section on accessories.

1. Open Grundfos GO.
  - The QR code on the front of the ALPHA2 GO circulator pump leads you to **GO Replace** in Grundfos GO.
  - If the app is not installed, the QR code leads you to a download site guiding you to install the app on your device.
2. Go to **GO Replace**.  
**GO Replace** can be found in the **Products** tab or in the **Overview** tab after it has been added to **Your tools**.
3. To identify the product being replaced, scan the nameplate or enter the 8-digit product number that can be found after "PN:" on the nameplate.
4. Select an ALPHA2 GO pump from the list to be used as replacement of the existing circulator pump.
5. Follow the instructions in Grundfos GO to match the performance and the configuration of the existing circulator pump with the new ALPHA2 GO pump.

During the replication process the ALPHA2 GO circulator pump must be connected to Grundfos GO via Bluetooth connection. Grundfos GO downloads the configuration from the cloud to set the ALPHA2 GO circulator pump to match the performance and configuration of the existing circulator pump.

## Related information

[9.2 Connecting the product to Grundfos GO](#)

[11.13 Incorrect PWM configuration](#)

## 9. Setting of the product

The operating panel can be used for the following:

- Connecting to Grundfos GO.
- Selecting proportional pressure (radiator system), constant pressure (underfloor heating system) or constant curve (speed).
- Selecting pump setting (I, II, III or AUTOADAPT) for the three control modes available on the operating panel.

In Grundfos GO you can access all settings.

### Related information

#### [7.1 Operating panel](#)

### 9.1 Enabling Bluetooth

To activate Bluetooth on the pump, do as follows:

1. Press the **Connect** button to activate and deactivate Bluetooth.
  - If the blue LED is flashing, the pump is ready to connect to a device.
  - If the blue LED is permanently on, the pump is connected to Grundfos GO.

### 9.2 Connecting the product to Grundfos GO

Before connecting the product to Grundfos GO, the Grundfos GO app must be downloaded to your smartphone or tablet. The app is free of charge and available for iOS and Android devices.

The connection can be started either from the operating panel or Grundfos GO. If you have several products installed, we recommend starting the connection from the operating panel.

1. Open Grundfos GO on your device. Make sure that Bluetooth is enabled.  
Your device must be within reach of the product to establish Bluetooth connection.
2. Go to the **Remote** menu in Grundfos GO.
3. Press the **Connect** button on the operating panel. The LED next to the **Connect** button flashes until your device is connected.
4. Press **CONNECT** in Grundfos GO.

Once the connection is established, the LED is permanently on.  
Grundfos GO is now loading the data for the product.

### Related information

#### [6. Starting up the product](#)

#### [6.1 Venting the product](#)

##### [8.7.1 Replacing a UPM3 or UPM4 pump](#)

### 9.3 Setting of the pump in Grundfos GO

Once the pump is connected to Grundfos GO, you can choose between **Use default settings** and **Start setup**. We recommend selecting **Start setup** which leads you to the guided setup.

By answering a few simple questions, the guided setup will help you select the optimal control mode and setpoint for the system, which reduces energy consumption and helps prevent potential noise problems.

If you select **Use default settings**, the pump uses the factory setting, proportional pressure, AUTOADAPT.

### 9.4 Air detection and system venting

The product offers a **Continuous air detection and venting** feature which means the pump can detect air and push it quickly to the air removal device.

If the pump detects air, it runs a venting sequence which enables more air to escape compared to letting the pump run at maximum speed during the entire process.

During system venting, the air is pushed to the system vent.

The function can be enabled in Grundfos GO in the **Settings** menu.

During the guided setup, you are asked if you want to vent the pump and system now. This is a one time event and will not permanently enable this function..

### 9.5 Flow limitation

You can set a minimum and maximum flow rate in Grundfos GO.

A minimum flow limit can be set to prevent the boiler from overheating. A maximum flow limit can be set to prevent noise in the system.

### 9.6 Night setback

This product offers a night setback function, which can only be activated via Grundfos GO in the **Settings** menu. When automatic night setback is enabled, the pump automatically switches between normal operation and the automatic night setback curve and reduces energy consumption.



The night setback function is available in all control modes.

The pump switches to automatic night setback when a flow-pipe temperature drop of more than 10 to 15 °C within approximately two hours is registered. The temperature drop must be at least 0.1 °C/min. Changeover to normal operation takes place without a time lag when the flow-pipe temperature has increased by approximately 10 °C. You do not have to re-enable automatic night setback if the power supply has been switched off.

If there is insufficient heat in the heating system, check whether night setback has been enabled. If yes, disable the function.

1. Connect the pump to Grundfos GO.
2. Press the gear icon in the top right side of the screen.
3. Go to the **Night setback** menu.
4. Disable the night setback.



Do not use night setback when the pump is installed in the return pipe of the heating system.

## 9.7 Trend data

In the **Trend data** menu in Grundfos GO, you can see system data for the last 10 or 100 on-cycles. An on-cycle is the period from when the pump turns on until it turns off. If the pump runs continuously for more than 24 hours, one on-cycle is registered and a new on-cycle will start even though the pump has not yet turned off.

You can see the following data:

- **Duration of each on-cycle**
- **Flow**
- **Head**
- **Estimated media temperature.**

You can use the trend data for system optimization and fault finding.

## 9.8 Updating the software

Follow the steps below to update the product's software via Grundfos GO:

1. Make sure your smart device has sufficient power.
2. Make sure your smart device is connected to the internet.

If there is no internet where the pump is installed, go to step 3 and then follow the instructions in Grundfos GO.

3. Connect your product to Grundfos GO if it is not already connected.

The app automatically checks if the product has the latest software installed. If a newer version is available, the text **New software available** appears on the dashboard in Grundfos GO. You can also check for software updates in the **Settings** menu.

4. Follow the guide in Grundfos GO to install the software update.

## 9.9 Resetting user settings

The user settings can be reset in two ways:

- **Via Grundfos GO**

1. Open Grundfos GO.
2. Press the gear icon in the top right side of the screen.
3. Go to the **Reset user settings** menu and press **Reset**.

- **Via the operating panel**

1. Press and hold the **Selection** button for 5 seconds.

## 9.10 Factory reset

The factory reset option is only available via Grundfos GO and requires that the pump has been replicated via GO replace.

- 

1. Open Grundfos GO.
2. Press the gear icon in the top right side of the screen.
3. Go to the **Reset factory settings** menu and press **Factory reset**.

## 10. Service

### WARNING

#### Electric shock

Death or serious personal injury



- All electrical connections must be carried out by a qualified electrician in accordance with local regulations.
- Switch off the power supply before you start any work on the product. Make sure that the power supply cannot be switched on accidentally.
- A damaged product must be repaired or replaced by Grundfos or a service workshop authorized by Grundfos.
- Connect the pump to earth.

### WARNING

#### Pressurised system

Minor or moderate personal injury



- Before disassembling the pump, drain the system or close the isolating valves on both sides of the pump. Slowly loosen the screws and unpressurize the system. The pumped liquid may be scalding hot and under high pressure.

### WARNING

#### Hot surface

Minor or moderate personal injury



- The pump housing may be hot due to the pumped liquid being scalding hot. Close the isolating valves on both sides of the pump and wait for the pump housing to cool down.

### 10.1 Dismantling the product

Follow the steps below to dismantle the product:

1. Switch off the power supply.
2. Close the inlet and outlet valves.
3. Pull out the power plug.
4. Loosen the unions.
5. Remove the pump from the system.

## 11. Fault finding

### WARNING

#### Electric shock

Death or serious personal injury



- Switch off the power supply before you start any work on the product. Make sure that the power supply cannot be switched on accidentally.
- A damaged product must be repaired or replaced by Grundfos or a service workshop authorized by Grundfos.

### WARNING

#### Hot surface

Minor or moderate personal injury



- The pump housing may be hot due to the pumped liquid being scalding hot. Close the isolating valves on both sides of the pump and wait for the pump housing to cool down.

### CAUTION

#### Pressurised system

Minor or moderate personal injury



- Before disassembling the pump, drain the system or close the isolating valves on both sides of the pump. The pumped liquid may be scalding hot and under high pressure.

### 11.1 Alarm and warning code logs

Grundfos GO saves up to 20 alarms and warnings in total in the **Alarms and warnings** menu.

## 11.2 Faults indicated on the pump

Faults preventing the pump from operating properly are indicated on the operating panel with the warning and alarm symbol turning either yellow or red.

A warning is indicated when the warning and alarm symbol is turning yellow. The pump is still running, but it does not perform as expected, and action is required in case of insufficient heating or discomfort. The operating panel alternates between showing either the error code or the control mode and setpoint.

An alarm is indicated when the warning and alarm symbol is turning red and the pump stops. In case of an alarm, all modes, speed and unit LEDs are switched off. Action is required.

It is still possible to connect to the pump in order to get a detailed error description from Grundfos GO.

If an alarm or warning is present, an error code will be displayed in the unit LED display.

| LED                                                                               | Description        |
|-----------------------------------------------------------------------------------|--------------------|
|  | Warning indication |
|  | Alarm indication   |

### 11.2.1 Overview of alarm and warning codes

Fault table

| Symbol                                                                             | Code on operating panel | Code in Grundfos GO | Fault                         |
|------------------------------------------------------------------------------------|-------------------------|---------------------|-------------------------------|
|   | E1                      | 51                  | Blocked motor                 |
|   | E2                      | 40                  | Undervoltage                  |
|                                                                                    |                         | 4                   | Overvoltage                   |
|                                                                                    |                         | 29                  | Forced pumping                |
|                                                                                    |                         | 72                  | Internal fault                |
|   | E3                      | 76                  | Internal fault                |
|                                                                                    |                         | 85                  | Internal fault                |
|                                                                                    |                         | 132                 | GSC file corrupted or missing |
|   | E4                      | 57                  | Dry running                   |
|   | E3                      | 43                  | Forced pumping                |
|  | E9                      | 25                  | Incorrect PWM configuration   |
|                                                                                    |                         | 35                  | Air in media <sup>3)</sup>    |

<sup>3)</sup> This error is not shown on the operating panel. It is logged and can only be seen in Grundfos GO.

### 11.3 Resetting alarms and warnings manually with Grundfos GO

1. Go to **Alarms and warnings**.

2. Press **Reset alarm**.

All current alarms and warnings have been reset. However, if the fault causing the alarm or warning has not been removed, the alarm or warning will appear again.

3. If you want to delete all alarms and warnings from the history log, press **Show log > Reset alarm and warning logs**.

### 11.4 Noise in the system

| Cause                       | Remedy                                                                                                                                                                                                                       |
|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The flow is too high.       | <ul style="list-style-type: none"> <li>• Lower the flow.</li> </ul>                                                                                                                                                          |
| There is air in the system. | <ol style="list-style-type: none"> <li>1. Connect the pump to Grundfos GO.</li> <li>2. Select the <b>Settings</b> menu.</li> <li>3. Select <b>Vent pump (15 minutes)</b>.</li> <li>4. Press <b>Start venting</b>.</li> </ol> |

### 11.5 Code 57 (Dry running)

The warning and alarm symbol flashes red, the display shows error code **E4** and the pump stops.

| Cause                                                               | Remedy                                                                                                                                                          |
|---------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Insufficient water in the system or the system pressure is too low. | <ul style="list-style-type: none"> <li>• Fill the system with the correct amount of liquid.</li> <li>• Prime and vent the pump before a new startup.</li> </ul> |

### 11.6 Code 51 (Blocked pump)

The warning and alarm symbol flashes red, the display shows error code **E1** and the pump stops.

| Cause                | Remedy                                                                                                                                                                                               |
|----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The pump is blocked. | <p>Only a qualified specialist must perform such work.</p> <ol style="list-style-type: none"> <li>1. Isolate the pump.</li> <li>2. Remove the pump head.</li> <li>3. Remove the deposits.</li> </ol> |

### 11.7 Code 40 (Undervoltage)

The warning and alarm symbol flashes red, the display shows error code **E2** and the pump stops.

| Cause                                      | Remedy                                                                                                             |
|--------------------------------------------|--------------------------------------------------------------------------------------------------------------------|
| The supply voltage to the pump is too low. | <ul style="list-style-type: none"> <li>• Make sure that the power supply is within the specified range.</li> </ul> |

### 11.8 Code 4 (Overvoltage)

The warning and alarm symbol flashes red, the display shows error code **E3** and the pump stops.

| Cause                                       | Remedy                                                                                                             |
|---------------------------------------------|--------------------------------------------------------------------------------------------------------------------|
| The supply voltage to the pump is too high. | <ul style="list-style-type: none"> <li>• Make sure that the power supply is within the specified range.</li> </ul> |

### 11.9 Code 72 (Internal fault)

The warning and alarm symbol flashes red, the display shows error code **E3** and the pump stops.

| Cause           | Remedy                                                                                    |
|-----------------|-------------------------------------------------------------------------------------------|
| Internal fault. | <ul style="list-style-type: none"> <li>• Replace the pump or contact Grundfos.</li> </ul> |

### 11.10 Code 76 (Internal fault)

The warning and alarm symbol flashes red, the display shows error code **E3** and the pump stops.

| Cause           | Remedy                                                                                  |
|-----------------|-----------------------------------------------------------------------------------------|
| Internal fault. | <ul style="list-style-type: none"> <li>Replace the pump or contact Grundfos.</li> </ul> |

### 11.11 Code 85 (Internal fault)

The warning and alarm symbol flashes red, the display shows error code **E3** and the pump stops.

| Cause           | Remedy                                                                                  |
|-----------------|-----------------------------------------------------------------------------------------|
| Internal fault. | <ul style="list-style-type: none"> <li>Replace the pump or contact Grundfos.</li> </ul> |

### 11.12 Code 132 (Pump configuration corrupted or missing)

The warning and alarm symbol flashes red, the display shows error code **E3** and the pump stops.

| Cause                                                    | Remedy                                                                                                     |
|----------------------------------------------------------|------------------------------------------------------------------------------------------------------------|
| The configuration file has been corrupted or is missing. | <ul style="list-style-type: none"> <li>Reconnect with Grundfos GO and repeat the configuration.</li> </ul> |

### 11.13 Code 25 (Incorrect PWM configuration)

The warning and alarm symbol flashes yellow, and the pump continues to run.

| Cause                                                                                                   | Remedy                                                                                                                                                                                                                                                                                                                             |
|---------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The pump is receiving a signal via the PWM input, but the PWM configuration is missing or not finished. | <ul style="list-style-type: none"> <li>Ensure the pump is set to externally controlled (PWM mode).</li> <li>Finalise the PWM configuration via the <b>Settings</b> menu.</li> </ul> <p>If the pump is to be used as a replacement pump, replicate the configuration of the pump to be replaced via the <b>GO Replace</b> tool.</p> |

#### Related information

[8.7.1 Replacing a UPM3 or UPM4 pump](#)

### 11.14 Code 29 (Forced pumping)

The warning and alarm symbol is permanently red, the display shows error code **E3** and the pump stops.

| Cause                                                            | Remedy                                                                                                                                                                                                            |
|------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Other pumps or sources create a flow backwards through the pump. | <ul style="list-style-type: none"> <li>Check the system for correct position of the non-return valves.</li> <li>Check the system for defective non-return valves, and replace the valves if necessary.</li> </ul> |

### 11.15 Code 43 (Forced pumping)

The warning and alarm symbol is permanently yellow, the display shows error code **E3** and the pump is running.

| Cause                                                  | Remedy                                                                                                                                                                                                            |
|--------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Other pumps or sources create a flow through the pump. | <ul style="list-style-type: none"> <li>Check the system for correct position of the non-return valves.</li> <li>Check the system for defective non-return valves, and replace the valves if necessary.</li> </ul> |

### 11.16 Code 35 (Air in media)

This is not shown on the operating panel. It is logged and can be seen in Grundfos GO.

| Cause                                   | Remedy                                                                                                                                             |
|-----------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| There is air in the pump and/or system. | <ul style="list-style-type: none"> <li>Vent the pump and system.</li> <li>If the problem persists, investigate the system for leakages.</li> </ul> |

## 12. Technical data

|                                         |                                                                                |
|-----------------------------------------|--------------------------------------------------------------------------------|
| Supply voltage                          | 1 × 220-240 V, ± 6 %, 50/60 Hz                                                 |
| Minimum supply voltage                  | 160 VAC (pump operation is ensured above 160 VAC but with reduced performance) |
| Motor protection                        | The pump requires no external motor protection.                                |
| Enclosure class                         | Indoor use only<br>IP44<br>IPX4D (only ALPHA2 K XX-75)                         |
| Temperature class                       | TF110 to EN 60335-2-51<br>TF95 to EN 60335-2-51 (only ALPHA2 GO XX-90)         |
| Reaction time - power on                | < 2 s                                                                          |
| Reaction time - standby                 | < 1 s                                                                          |
| Reaction time - speed change            | < 1 s                                                                          |
| Inrush current                          | < 4 A                                                                          |
| Standby power consumption <sup>4)</sup> | < 0.7 W                                                                        |
| Insulation class                        | F                                                                              |
| Relative humidity                       | Max. 95 %                                                                      |
| Max. outlet pressure                    | 1.0 MPa (10 bar)                                                               |
| Surge robustness                        | > 3 W (DWCM)                                                                   |
| Radio frequency radiation exposure      | -6 dB CE/EN55014-1, CE/EN55014-2                                               |
| Sound pressure level (LP)               | < 25 dB(A)                                                                     |
| Pump housing                            | Electrocoated cast iron                                                        |
| Connection type                         | G 1, G 1 1/2, G 2                                                              |

<sup>4)</sup> Applicable for pumps that are stopped and connected to the power supply. Only applicable for variants with the PWM functionality.

### Product size

|       | Max. flow rate (Q)<br>[m³/h] | Max. head (H)<br>[m] |
|-------|------------------------------|----------------------|
| XX-40 | 2.7                          | 4.0                  |
| XX-60 | 3.5                          | 6.0                  |
| XX-75 | 4.5                          | 7.5                  |
| XX-90 | 4.8                          | 9.0                  |

### Power usage (approximate)

|       | Min. | Max. |
|-------|------|------|
| XX-40 | 3 W  | 21 W |
| XX-60 | 3 W  | 37 W |
| XX-75 | 3 W  | 75 W |
| XX-90 | 3 W  | 90 W |

### Liquid temperature

|         | Max. ambient temperature<br>55 °C | Max. ambient temperature<br>70 °C |
|---------|-----------------------------------|-----------------------------------|
| XX-40   | 2 to 110 °C                       | 2 to 75 °C                        |
| XX-60   | 2 to 110 °C                       | 2 to 75 °C                        |
| XX-75   | -10 to +110 °C                    | -10 to +75 °C                     |
| K XX-75 | -20 to +110 °C                    | -20 to +75 °C                     |
| XX-90   | -10 to +95 °C                     | -10 to +60 °C                     |
| K XX-90 | -20 to +95 °C                     | -20 to +60 °C                     |

For variants where the minimum liquid temperature is 2 °C or -10 °C, operation in periodically condensing applications<sup>5)</sup> is allowed.

For variants where the minimum liquid temperature is -20 °C, operation in continuous condensing applications<sup>6)</sup> is allowed.

Carefully install the circulator pump with the drain hole facing downward. See section Mechanical installation.

### Inlet pressure

| Liquid temperature<br>[°C] | Min. inlet pressure<br>[bar] |
|----------------------------|------------------------------|
| 75                         | 0.05                         |

<sup>5)</sup> For periodical condensing applications, the circulator pump must not circulate liquid at a temperature below ambient air temperature for more than three consecutive months each year. During the rest of the year, it must operate in non-condensing mode. Prolonged condensing operation may damage the circulator pump.

<sup>6)</sup> In continuous condensing applications, any condensate formed over long periods will drain away through the provided hole.

| Liquid temperature<br>[°C] | Min. inlet pressure<br>[bar] |
|----------------------------|------------------------------|
| 95                         | 0.5                          |
| 110                        | 1.08                         |

#### Related information

##### [2.5.1 Nameplate](#)

### 13. Disposing of the product

This product or parts of it must be disposed of in an environmentally sound way.

1. Use the public or private waste collection service.
2. If this is not possible, contact the nearest Grundfos company or service workshop.
3. Dispose of the waste battery through the national collective schemes. If in doubt, contact your local Grundfos company.



The crossed-out wheellie bin symbol on a product means that it must be disposed of separately from household waste. When a product marked with this symbol reaches its end of life, take it to a collection point designated by the local waste disposal authorities. The separate collection and recycling of such products will help protect the environment and human health.

See also end-of-life information at [www.grundfos.com/product-recycling](http://www.grundfos.com/product-recycling).

### 14. Document quality feedback

To provide feedback about this document, scan the QR-code using your phone's camera or a QR code app.



[Click here to submit your feedback](#)

**Argentina**

Bombas GRUNDFOS de Argentina S.A.  
Ruta Panamericana km. 37.500 Industrias  
1619 - Garin Pcia. de B.A.  
Tel.: +54-3327 414 444  
Fax: +54-3327 45 3190

**Australia**

GRUNDFOS Pumps Pty. Ltd.  
P.O. Box 2040  
Regency Park  
South Australia 5942  
Tel.: +61-8-8461-6611  
Fax: +61-8-8340-0155

**Austria**

GRUNDFOS Pumpen Vertrieb  
Ges.m.b.H.  
Grundfosstraße 2  
A-5082 Grödig/Salzburg  
Tel.: +43-6246-883-0  
Fax: +43-6246-883-30

**Belgium**

N.V. GRUNDFOS Bellux S.A.  
Boomsesteenweg 81-83  
B-2630 Aartselaar  
Tel.: +32-3-870 7300  
Fax: +32-3-870 7301

**Bosnia and Herzegovina**

GRUNDFOS Sarajevo  
Zmaj od Bosne 7-7A  
BiH-71000 Sarajevo  
Tel.: +387 33 592 480  
Fax: +387 33 590 465  
www.ba.grundfos.com  
E-mail: grundfos@bih.net.ba

**Brazil**

BOMBAS GRUNDFOS DO BRASIL  
Av. Humberto de Alencar Castelo  
Branco, 630  
CEP 09850 - 300  
São Bernardo do Campo - SP  
Tel.: +55-11 4393 5533  
Fax: +55-11 4343 5015

**Bulgaria**

Grundfos Bulgaria EOOD  
Slatina District  
Iztocna Tangenta street no. 100  
BG - 1592 Sofia  
Tel.: +359 2 49 22 200  
Fax: +359 2 49 22 201  
E-mail: bulgaria@grundfos.bg

**Canada**

GRUNDFOS Canada inc.  
2941 Brighton Road  
Oakville, Ontario  
L6H 6C9  
Tel.: +1-905 829 9533  
Fax: +1-905 829 9512

**China**

GRUNDFOS Pumps (Shanghai) Co. Ltd.  
10F The Hub, No. 33 Suhong Road  
Minhang District  
Shanghai 201106 PRC  
Tel.: +86 21 612 252 22  
Fax: +86 21 612 253 33

**Colombia**

GRUNDFOS Colombia S.A.S.  
Km 1.5 vía Siberia-Cota Conj. Potrero  
Chico,  
Parque Empresarial Arcos de Cota Bod.  
1A.  
Cota, Cundinamarca  
Tel.: +57(1)-2913444  
Fax: +57(1)-8764586

**Croatia**

GRUNDFOS CROATIA d.o.o.  
Buzinski prilaz 38, Buzin  
HR-10010 Zagreb  
Tel.: +385 1 6595 400  
Fax: +385 1 6595 499  
www.hr.grundfos.com

**Czech Republic**

GRUNDFOS Sales Czechia and Slovakia  
s.r.o.  
Čajkovského 21  
779 00 Olomouc  
Tel.: +420-585-716 111

**Denmark**

GRUNDFOS DK A/S  
Martin Bachs Vej 3  
DK-8850 Bjerringbro  
Tel.: +45-87 50 50 50  
www.grundfos.com/DK

**Estonia**

SIA Grundfos Pumps Baltic Eesti filiaal  
Priisle tee 10  
13914 Tallinn  
Tel.: + 372 606 1690  
E-mail: estonia@sales.grundfos.com

**Finland**

OY GRUNDFOS Pumput AB  
Trukkikuja 1  
FI-01360 Vantaa  
Tel.: +358-(0) 207 889 500

**France**

Pompes GRUNDFOS Distribution S.A.  
Parc d'Activités de Chesnes  
57, rue de Malacombe  
F-38290 St. Quentin Fallavier (Lyon)  
Tel.: +33-4 74 82 15 15  
Fax: +33-4 74 94 10 51

**Germany**

GRUNDFOS GMBH  
Schlüterstr. 33  
40699 Erkrath  
Tel.: +49-(0) 211 929 69-0  
Fax: +49-(0) 211 929 69-3799  
E-mail: infoservice@grundfos.de  
Service in Deutschland:  
kundendienst@grundfos.de

**Greece**

GRUNDFOS Hellas A.E.B.E.  
20th km. Athinon-Markopoulou Av.  
P.O. Box 71  
GR-19002 Peania  
Tel.: +0030-210-66 83 400  
Fax: +0030-210-66 46 273

**Hong Kong**

GRUNDFOS Pumps (Hong Kong) Ltd.  
Unit 1, Ground floor, Siu Wai Industrial  
Centre  
29-33 Wing Hong Street & 68 King Lam  
Street, Cheung Sha Wan  
Kowloon  
Tel.: +852-27861706 / 27861741  
Fax: +852-27858664

**Hungary**

GRUNDFOS South East Europe Kft.  
Tópark u. 8  
H-2045 Törökbálint  
Tel.: +36-23 511 110  
Fax: +36-23 511 111

**India**

GRUNDFOS Pumps India Private  
Limited  
118 Old Mahabalipuram Road  
Thoraiakkam  
Chennai 600 097  
Tel.: +91-44 2496 6800

**Indonesia**

PT GRUNDFOS Pompa  
Graha intirub Lt. 2 & 3  
Jln. Cililitan Besar No.454. Makasar,  
Jakarta Timur  
ID-Jakarta 13650  
Tel.: +62 21-469-51900  
Fax: +62 21-460 6910 / 460 6901

**Ireland**

GRUNDFOS (Ireland) Ltd.  
Unit A, Merrywell Business Park  
Ballymount Road Lower  
Dublin 12  
Tel.: +353-1-4089 800  
Fax: +353-1-4089 830

**Italy**

GRUNDFOS Pompe Italia S.r.l.  
Via Gran Sasso 4  
I-20060 Truccazzano (Milano)  
Tel.: +39-02-95838112  
Fax: +39-02-95309290 / 95838461

**Japan**

GRUNDFOS Pumps K.K.  
1-2-3, Shin-Miyakoda, Kita-ku  
Hamamatsu  
431-2103 Japan  
Tel.: +81 53 428 4760  
Fax: +81 53 428 5005

**Kazakhstan**

Grundfos Kazakhstan LLP  
7' Kyz-Zhibek Str., Kok-Tobe micr.  
KZ-050020 Almaty Kazakhstan  
Tel.: +7 (727) 227-98-55/56

**Korea**

GRUNDFOS Pumps Korea Ltd.  
6th Floor, Aju Building 679-5  
Yeoksam-dong, Kangnam-ku, 135-916  
Seoul, Korea  
Tel.: +82-2-5317 600  
Fax: +82-2-5633 725

**Latvia**

GRUNDFOS Pumps Baltic SIA  
Gunāra Astras iela 8B  
LV-1082, Rīga,  
Tel.: + 371 671 49640  
E-mail: latvia@sales.grundfos.com

**Lithuania**

SIA „GRUNDFOS PUMPS  
BALTIC“ Lietuvos filialas  
Smolensko g. 6  
LT-03201 Vilnius  
Tel.: + 370 5 239 5430  
E-mail: lithuania@sales.grundfos.com

**Malaysia**

GRUNDFOS Pumps Sdn. Bhd.  
7 Jalan Peguam U1/25  
Glenmarie Industrial Park  
40150 Shah Alam, Selangor  
Tel.: +60-3-5569 2922  
Fax: +60-3-5569 2866

**Mexico**

Bombas GRUNDFOS de México  
S.A. de C.V.  
Boulevard TLC No. 15  
Parque industrial Stiva Aeropuerto  
Apodaca, N.L. 66600  
Tel.: +52-81-8144 4000  
Fax: +52-81-8144 4010

**Netherlands**

GRUNDFOS Netherlands  
Veluwezoom 35  
1326 AE Almere  
Postbus 22015  
1302 CA ALMERE  
Tel.: +31-88-478 6336  
Fax: +31-88-478 6332  
E-mail: info\_gnl@grundfos.com

**New Zealand**

GRUNDFOS Pumps NZ Ltd.  
17 Beatrice Tinsley Crescent  
North Harbour Industrial Estate  
Albany, Auckland  
Tel.: +64-9-415 3240  
Fax: +64-9-415 3250

**Norway**

GRUNDFOS Pumper A/S  
Strømsveien 344  
Postboks 235, Leirdal  
N-1011 Oslo  
Tel.: +47-22 90 47 00  
Fax: +47-22 32 21 50

**Poland**

GRUNDFOS Pompy Sp. z o.o.  
ul. Klonowa 23  
Baranowo k. Poznań  
PL-62-081 Przeźmierowo  
Tel.: (+48-61) 650 13 00  
Fax: (+48-61) 650 13 50

**Portugal**

Bombas GRUNDFOS Portugal, S.A.  
Rua Calvet de Magalhães, 241  
Apartado 1079  
P-2770-153 Paço de Arcos  
Tel.: +351-21-440 76 00  
Fax: +351-21-440 76 90

**Romania**

GRUNDFOS Pompe România SRL  
S-PARK BUSINESS CENTER, Clădirea  
A2, etaj 2  
Str. Tipografilor, Nr. 11-15, Sector 1, Cod  
013714  
București, Romania  
Tel.: 004 021 2004 100  
E-mail: romania@grundfos.ro

**Serbia**

Grundfos Srbija d.o.o.  
Ormladinskih brigada 90b  
11070 Novi Beograd  
Tel.: +381 11 2258 740  
Fax: +381 11 2281 769  
www.rs.grundfos.com

**Singapore**

GRUNDFOS (Singapore) Pte. Ltd.  
25 Jalan Tukang  
Singapore 619264  
Tel.: +65-6681 9688  
Fax: +65-6681 9689

**Slovakia**

GRUNDFOS s.r.o.  
Prievozská 4D 821 09 BRATISLAVA  
Tel.: +421 2 5020 1426  
sk.grundfos.com

**Slovenia**

GRUNDFOS LJUBLJANA, d.o.o.  
Leskoškova 9e, 1122 Ljubljana  
Tel.: +386 (0) 1 568 06 10  
Fax: +386 (0) 1 568 06 19  
E-mail: tehnika-si@grundfos.com

**South Africa**

GRUNDFOS (PTY) LTD  
16 Lascelles Drive, Meadowbrook Estate  
1609 Germiston, Johannesburg  
Tel.: (+27) 10 248 6000  
Fax: (+27) 10 248 6002  
E-mail: lgradidge@grundfos.com

**Spain**

Bombas GRUNDFOS España S.A.  
Camino de la Fuentequilla, s/n  
E-28110 Algete (Madrid)  
Tel.: +34-91-848 8800  
Fax: +34-91-628 0465

**Sweden**

GRUNDFOS AB  
Box 333 (Lunnagårdsgatan 6)  
431 24 Mölndal  
Tel.: +46 31 332 23 000  
Fax: +46 31 331 94 60

**Switzerland**

GRUNDFOS Pumpen AG  
Bruggacherstrasse 10  
CH-8117 Fällanden/ZH  
Tel.: +41-44-806 8111  
Fax: +41-44-806 8115

**Taiwan**

GRUNDFOS Pumps (Taiwan) Ltd.  
7 Floor, 219 Min-Chuan Road  
Taichung, Taiwan, R.O.C.  
Tel.: +886-4-2305 0868  
Fax: +886-4-2305 0878

**Thailand**

GRUNDFOS (Thailand) Ltd.  
92 Chaloe Phrakiat Rama 9 Road  
Dokmai, Pravej, Bangkok 10250  
Tel.: +66-2-725 8999  
Fax: +66-2-725 8998

**Turkey**

GRUNDFOS POMPA San. ve Tic. Ltd.  
Stl.  
Gebze Organize Sanayi Bölgesi  
İhsan dede Caddesi  
2. yol 200, Sokak No. 204  
41490 Gebze/ Kocaeli  
Tel.: +90 - 262-679 7979  
Fax: +90 - 262-679 7905  
E-mail: satis@grundfos.com

**Ukraine**

ТОВ "ГРУНДФОС УКРАЇНА"  
Бізнес Центр Європа  
Столичне шосе, 103  
м. Київ, 01313, Україна  
Tel.: (+38 044) 237 04 00  
Fax: (+38 044) 237 04 01  
E-mail: ukraine@grundfos.com

**United Arab Emirates**

GRUNDFOS Gulf Distribution  
P.O. Box 16768  
Jebel Ali Free Zone, Dubai  
Tel.: +971 4 8815 166  
Fax: +971 4 8815 136

**United Kingdom**

GRUNDFOS Pumps Ltd.  
Grovebury Road  
Leighton Buzzard/Beds. LU7 4TL  
Tel.: +44-1525-850000  
Fax: +44-1525-850011

**U.S.A.**

Global Headquarters for WU  
856 Koomey Road  
Brookshire, Texas 77423 USA  
Phone: +1-630-236-5500

**Uzbekistan**

Grundfos Tashkent, Uzbekistan  
The Representative Office of Grundfos  
Kazakhstan in Uzbekistan  
38a, Oybek street, Tashkent  
Tel.: (+998) 71 150 3290 / 71 150 3291  
Fax: (+998) 71 150 3292

---

**93074263**

---

|              |         |
|--------------|---------|
| ECM: 1449961 | 06.2026 |
|--------------|---------|

---

**Grundfos Holding A/S**  
Poul Due Jensens Vej 7  
DK-8850 Bjerringbro  
Tel: +45 87 50 14 00  
[www.grundfos.com](http://www.grundfos.com)

